

FREE STANDING COLD WATER SHOWER BASE INSTALLATION

1-866-SHOWER1


WWW.OUTDOORSHOWERCO.COM

info@outdoorshowerco.com



You will need: 9/16" wrench and crescent wrench, Hammer, Roto Hammer - 3/8" drill bit, Teflon tape

Flush lines before installing valves and shower head. Debris in water line can cause valves to malfunction.

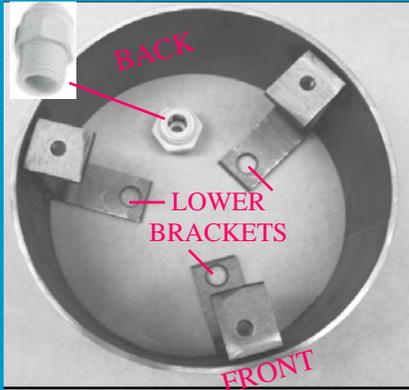

1. Run a 1/2" water supply line to the desired location of the shower unit. Cut off as close as possible to flooring surface.
2. Attach 1/2" water supply line to 1/2" x 3/8" Union approximately 1" off center of
3. Using Lower Bracket pre-drilled holes of the Base Cylinder as a guide, mark the placement of the drill holes at desired location of installation. Drill 3, 3/8" holes, 3" deep.

9. Attach straight valve to lower portion of shower unit, and attach riser to valve using Teflon Tape.




10. Attach any accessories to base using Teflon Tape. Tape is not needed for the Shower Head.



4. Attach Elbows and Adapters to Hose. Attach one end to water supply line coming out of the ground.



5. Position Base Cylinder to line up with pre-drilled holes in flooring surface. Insert Anchor Bolts in each hole. When bolts are in position hit the pin of the bolt with a hammer, locking it into place. Tighten nuts.

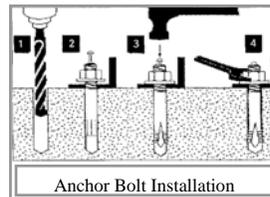

6. Lay Shower Base and Cover Plate on Base Cylinder and attach other end of hose to opening on underside.

7. Curl hose inside Base Cylinder and place Base Plate on top, lining up with the 3 pre-drilled holes.

8. Stand shower base in upright position and attach Base Plate to Base Cylinder using button head cap screws.

BS-2000-ADA Shower Unit

- Metered Push Valves
- Foot Shower
- Hose Bibb


Foot Shower



Hose Bibb



ADA Compliant Metered Drinking Fountain Accessory

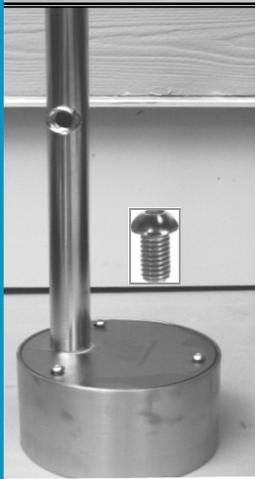

WINTERIZATION

It is recommended that a shut off valve be installed in the supply line going to the shower unit for winterization. To prevent freeze damage remove and store shower unit leaving Base Cylinder anchored to flooring surface. If the shower unit is left outdoors cut off water supply, completely drain or blow out all moisture, and remove all accessories and valves.

To disconnect hose from push-to-connect adapters push Release Collar in toward support sleeve.

FREEZE DAMAGE IS NOT COVERED BY THE WARRANTY.



FREE STANDING COLD WATER INSTALLATION